




TRANSPORT
S T Y L I N G

928/928B
Tvärbalkar

MONTERINGSANVISNING

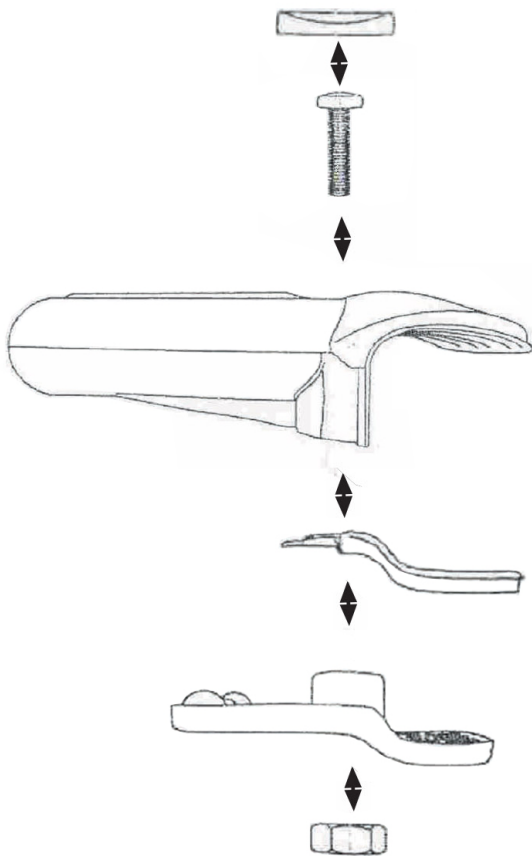

Montagetid
15 minuter