



MONTERINGSANVISNING
SIDOSTEG "AMAZON" I ROSTFRITT STÅL



MOUNTING DESCRIPTION
SIDE STEPS "AMAZON" IN STAINLESS STEEL



MONTAGEANLEITUNG
TRITTBRETTER "AMAZON" AUS EDELSTAHL



Make
Volkswagen


Model
Amarok

Year
2011-

Article Code
7535-942



45 min

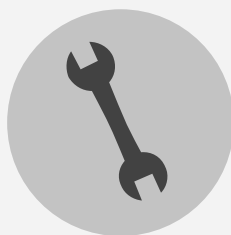



13
16/17



ISO 9000:2000




EN ISO 9001:2000

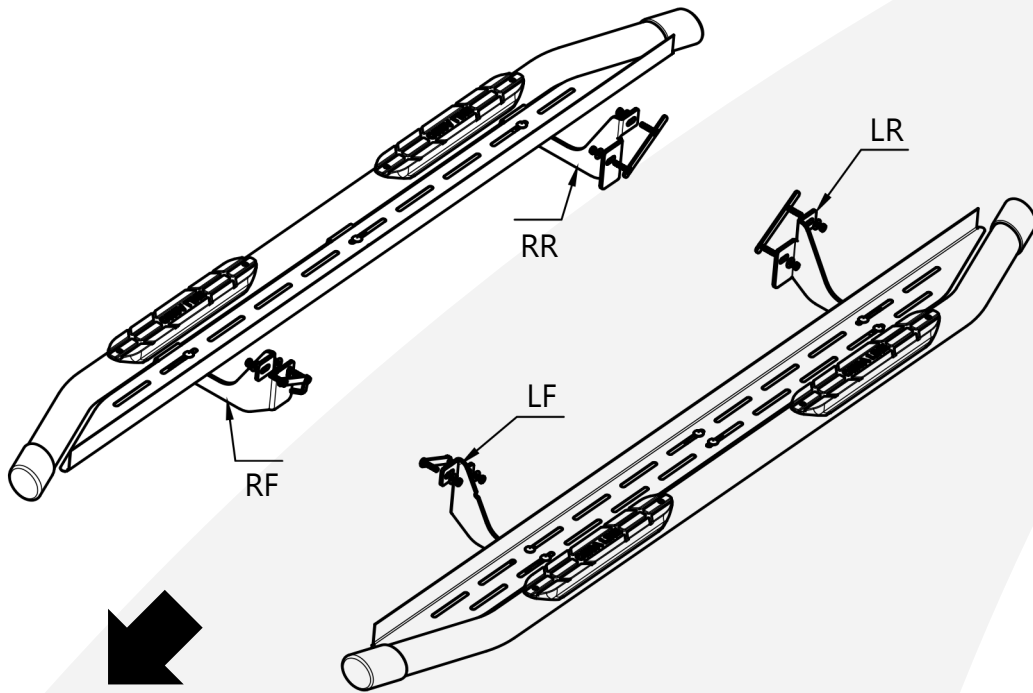

RF & LF

1x/1x



RR & LR

1x/1x



1

2x



2

2x



3

M8

8x



4

M8

16x



5

M8 x 20

12x



6

M10 x 20

12x



7

M10

12x




8

M12

12x

RF + LF

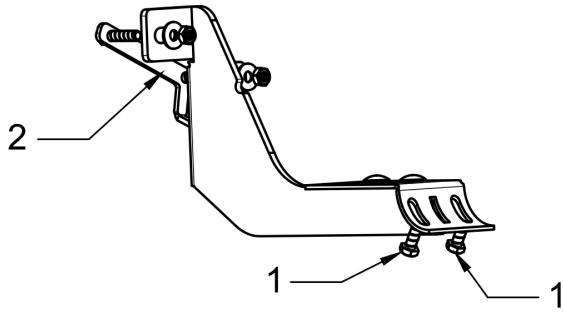

RR + LR

